



# INSTRUCTION MANUAL

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE

## PARTS LIST


				<p>1 &amp; 2. Plastic side panel          3. Seat cushion          4. Seat cushion (with logo)          5. Seat cushion (tapered)          6. Plastic steering wheel panel          7. Plastic table panel          8. Steering wheel          9. Timber handlebar          10. Strap          11. Rubber bumpers x2          12 &amp; 13. Stickers</p>
<p>11. Rubber Caps x 2</p>				

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE

Hokus Pokus Australia  
[www.hokuspokus.com.au](http://www.hokuspokus.com.au)  
[info@hokuspokus.com.au](mailto:info@hokuspokus.com.au)


# ASSEMBLY INSTRUCTIONS

## Step 1

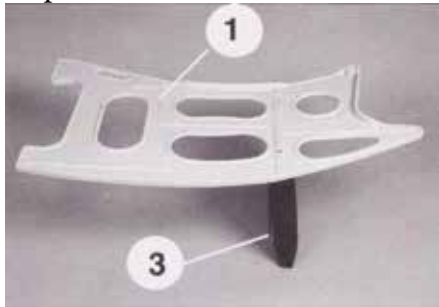


Attach parts 1 (plastic side panel) and 3 (long seat) as shown, with screws provided (fabric join on seat facing to the top).

## Step 2

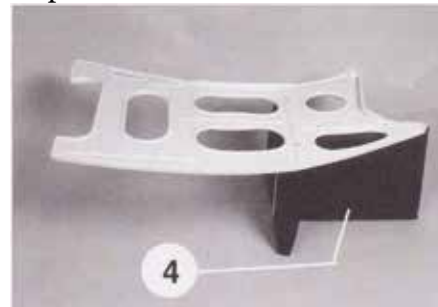

Attach part 4 (seat pad with embossed logo).

## Step 3

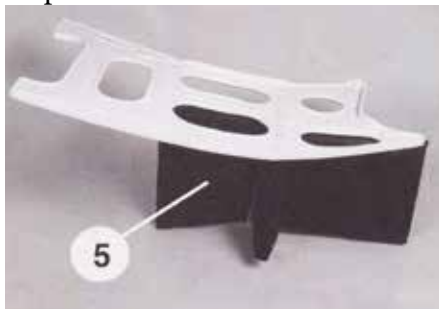


Attach part 5 (seat with tapered sides).

## Step 4




Attach plastic parts 6 (steering wheel base) and 7 (table top).

## Step 5

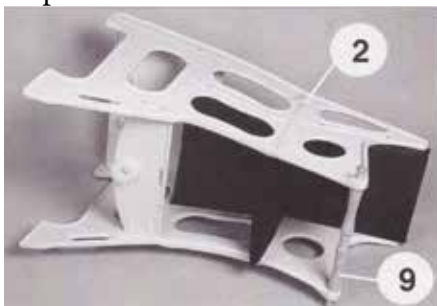

Insert handlebar. Turn high chair over and attach part 2.  
(Note : The handlebar must be inserted prior to attaching both side panels).

## Step 6

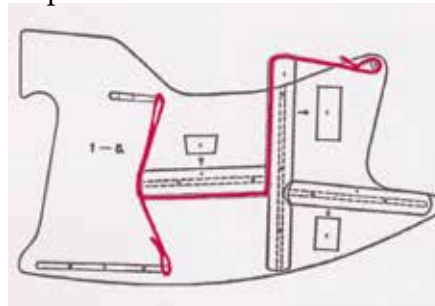

Attach the belt as shown in the images above. If assembled correctly the buckle will appear the same at both ends.



# ASSEMBLY INSTRUCTIONS

## Step 7



Attach rubber caps (part 11) to handlebar. Apply stickers (parts 12 & 13) if desired.

## Step 8



Insert steering wheel (part 8) into place by pressing until it clicks in. Wheel should rotate freely if inserted correctly.

# CARE AND MAINTENANCE

- To prolong the life of your product keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Plastic components may be cleaned using warm water with a household soap or mild detergent.
- Seats and strap may be cleaned using warm water only. Detergents may discolour and negatively affect the coverings.
- DO NOT use any harsh solvent cleaners as these may damage the product.
- To maintain the safety of your product, check regularly and seek prompt assistance for any worn or broken parts.
- The manufacturing process creates inconsistencies in the plastic structure that may affect the appearance of the product. This will not affect the performance or safety of the product.

**ALWAYS CHECK PARTS REGULARLY FOR TIGHTNESS OF SCREWS AND ANY OTHER FASTENERS - TIGHTEN IF REQUIRED.**

*Do not over-tighten screws as this may damage the product and make it unsafe.*

**IF THE CHAIR IS NOT WORKING CORRECTLY STOP USING CHAIR AND SEEK ASSISTANCE FROM THE MANUFACTURER.**



**FALL HAZARD!**  
**DO NOT LEAVE CHILDREN UNATTENDED**

# WARNINGS



## WARNING



- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- POSITION THE CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURUES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.
- Do not use until your child can sit upright independantly.
- Do not use if any part is broken, missing or faulty in any way.
- Do not use until all parts are correctly assembled and adjusted.
- Double check assembly prior to placing child into chair.
- Do not place the chair near open fires or heating appliances.
- Do not alter or modify this product.
- The weight of the child using this chair is not to exceed 20kg.
- Always use on a secure and level surface.
- Do not elevate the chair on any structure or table.
- Never carry or move the chair with the child in it.
- Regularly inspect the chair for any fault or damage. Stop using immediately if any fault found.
- When making adjustments to the chair, ensure that you and your child's body, fingers and toes are clear of any solid parts of the chair, otherwise they may be injured.
- Do not allow other children to play around the chair when in use due to risk of injury.

# WARRANTY

## **THIS WARRANTY IS VALID IN AUSTRALIA ONLY.**

Hokus Pokus Australia warrants this product for thirty six (36) months from the date of purchase against failure due to manufacturing faults or faulty materials. In the unlikely event that you find any material or workmanship that affects the units normal operation, we will replace the faulty part free of charge within 36 months of purchase. You are required to present your reciept as proof of purchase. Please read all the information carefully before using this product. This warranty does not apply to failure due to misuse, accidental damages, or normal wear and tear caused by product use. We reserve the right to inspect the unit prior to replacing any parts. The cost of returning items to Hokus Pokus Australia is at the customers expense and cannot be claimed as part of the warranty. Any items deemed to be not covered by the warranty will be returned to the customer at the customers expense. This warranty does not apply to a high chair used for commercial purposes.

Full terms and conditions can be found at [www.hokuspokus.com.au](http://www.hokuspokus.com.au)

Claims can be made by emailing [sales@hokuspokus.com.au](mailto:sales@hokuspokus.com.au)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a refund or replacement for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed in Australia by:

CB Imports Pty Ltd (Trading as Hokus Pokus Australia) A.C.N. 607 858 453

ADDRESS P.O. BOX 23, Patterson Lakes VIC 3197. PHONE 1300 685 354

[www.hokuspokus.com.au](http://www.hokuspokus.com.au)